

HOW TO CARE HUSH PRODUCTS

1 GLASS

Once a week, clean with a moist cloth, using circular movements.

If a cleaning agent is used, first apply it to a cloth, and then clean the surface.

2 UPHOLSTERY

Once every 6 months, vacuum all the surfaces, top-down.

More persistent stains must be removed with a neutral cleaning agent.

Before cleaning, check in an unobtrusive area how the surface reacts to the cleaning agent, and comply with the manufacturer's recommendations.

Upholstery cleaning agents must not contain paraffin, alcohol or other solvents.

3 SHELVES

Every day, clean the entire surface with a microfibre cloth moistened with a cleaning agent or water. Leave the surface to dry.

Do not apply the cleaning agent directly to the surfaces.

Do not use abrasive, glazing or coarse cleaning agents.

Microfibre cloths are lint-free and prevent streaking.



4 HANDLES

Every day, clean all the handles inside and outside the Hush pod with a moistened microfibre cloth.

After cleaning, wipe the surface dry.

5 VENTILATION SYSTEM

Once every 6 months, clean the fan with a soft vacuum-cleaner attachment.

Do not insert the vacuum-cleaner tube between the fan blades.

Before cleaning, disconnect the Hush pod from the power supply.

6 EXTERIOR

Once every 6 months, clean all the surfaces, top-down, with a moistened microfibre cloth.

7 FLOOR

Once a week, vacuum the entire floor.

More persistent stains must be removed with a neutral cleaning agent (If a cleaning agent is used, first apply it to a cloth or paper towel, and then clean the surface).

Before cleaning, check in an unobtrusive area how the surface reacts to the cleaning agent.



NOTE

Before the Hush pod is used, it is recommended that all handles and table surfaces should be cleaned. Special wipes can be used for this. If a cleaning agent is used, leave it on the surface for a few seconds, then wipe dry.



hushoffice

howtousehush.com