



Max Calma 4 User Guide

Product Range















How To Use Max Calma 4 140 x 220cm Acoustic Pod













Max Calma 4 is the perfect solution for team work, private conversations, creative collabrations. Designed for 4 people.

- Your Calma 4 has Nurus Links system integrated into the wall. In this way, besides having USB-A and USB-C connections, you can charge your phone and laptop thanks to the socket.
- The occupancy indicator located on the corners of the pod, shows the availability of Calma 4 (Red: Occupied, Green: Free)
- When you enter the Calma 4 pod, the movement sensor will automatically detects you and starts the fan.
- Once you are inside; you can switch the light button located on left on Nurus Links and adjust by holding to dim or increase the intensity of the light. You can save the light intensity by double clicking for later.
- You can adjust the fan level with the ventilation button on the right side of Nurus Links.
- If there is a fixed table inside Calma 4; the height of the table is 74 cm in accordance with the international standard EN 527-1.



Points To Consider:



Make sure the ventilation holes on the sides of Calma 4 are not blocked from outside.



Do not plug any appliances more than 220 V.



Make sure that the Calma 4 is not plugged in before you open the access cover on top.



Before moving Calma 4 to relocate, always raise its feet off the ground and move it on wheels. Make sure the Calma 4 is positioned back on the feet when the relocation is complete.



Keep the door closed all times.



Do not leave your charger and laptop plugged.



Do not smoke inside.



Keep fire away.

