


# MAX Calma

## Max Calma Small User Guide

### Product Range

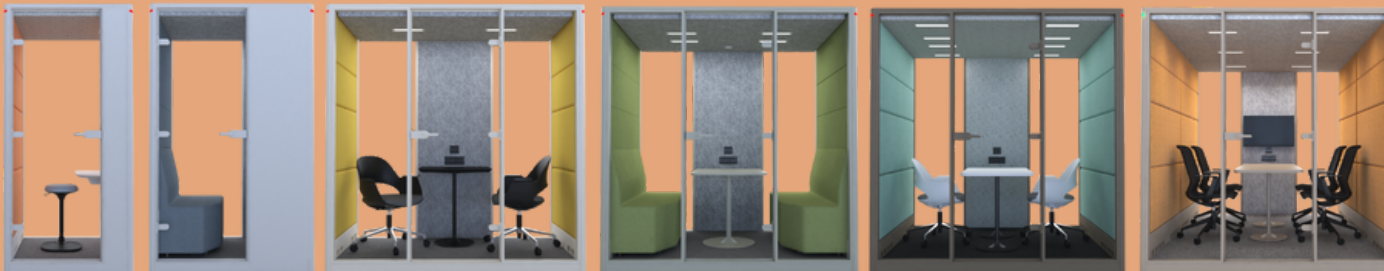

# How To Use Max Calma Small 100 x 110cm Acoustic Pod



Dimmable Light Control



Acoustic Felt Ceiling



Desktop Socket



Ventilation System Control

1

Max Calma Small (100x110) is ideal for quick and individual calls.

2

The occupancy indicator located on the corners of the pod, shows the availability of Acoustic Pod (Red: Occupied, Green: Free) - Optional.

3

When you enter the Calma Small pod the movement sensor will automatically detects you and starts the fan. Once you are inside; you can adjust by holding to dim or increase the intensity of the light. You can save the light intensity by double – clicking for later.

4

Calma S has a desktop socket. This includes a 1xUniversal Socket, 1x USB-A + 1x USB-C.



The Calma X Small (100x110 cm) is available with two different table options; fixed or height adjustable table.

- With the fixed table - the height is fixed to 96 cm. Please avoid leaning heavily on the table as you stand up or sit down.
- With the height-adjustable table; You can easily adjust the ideal height of the table for you with the control touchpad on the table. The height range is between 68 cm and 118 cm. Thus, the table can be used for standing work as well as for sitting. The maximum carrying capacity of your table is 50 kg.
- Please avoid leaning heavily on the table as you stand up or sit down.

## Points To Consider:



Make sure the ventilation holes on the sides of Calma S are not blocked from outside.



Do not plug any appliances more than 220 V.



Make sure that Calma is not plugged in before you open the access cover on top.



Before moving Calma S to relocate, always raise its feet off the ground and move it on wheels. Make sure the Calma S is positioned back on the feet when the relocation is complete.



Keep the door closed all times.



Do not leave your charger and laptop plugged.



Do not smoke inside.



Keep fire away.